

## < For iPhone >

# Follow this instruction before pairing.


### ① Cancellation of passcode lock function

If the automatic passcode lock function is turned on, you will be unable to unlock the screen via the Smartphone Controller.

Turn off the passcode lock function on your device before using the Smartphone Controller.

### ② Setting of “VoiceOver” shortcut


This setting enables you to turn on/off “VoiceOver” function by triple-click of the Home button.

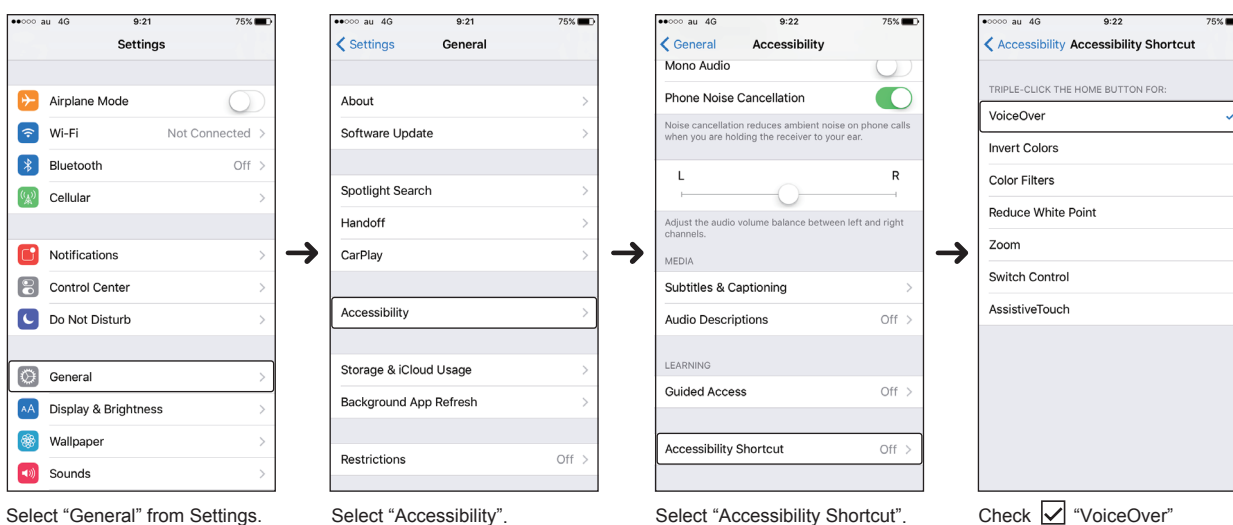

### ③ Setting of vertical move for cross joystick

Original operation of iPhone only allows the cursor to move left or right.

This setting makes the vertical move possible.

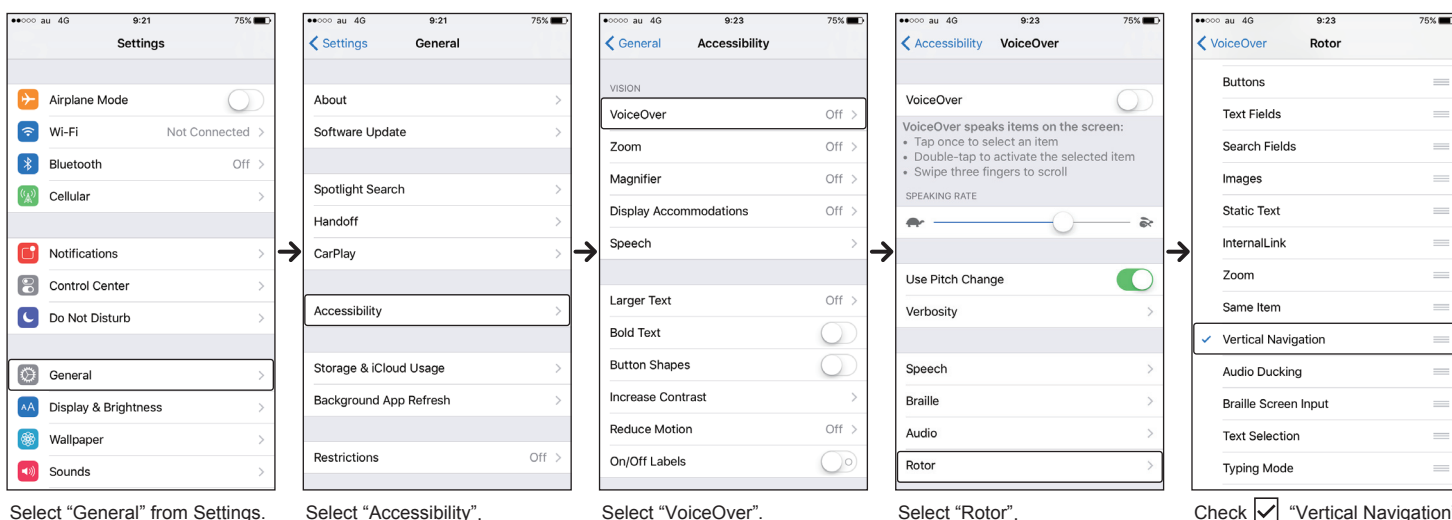

※ un-check all other than “Vertical Navigation”